

## RS-232 (RJ-45) LINK TESTER

ASM-232-RJ is RS-232 link tester. ASM232-RJ can test the signal of PC to RS-232 Printer or RS-232 Terminate; It is standard RJ-45 link tester. ASM-232-RJ use 9 pcs LED to show the test result. If your PC's RS-232 interface is DB9M - please purchase an adapter cable or adapter for installation.

### RS-232 / RJ-45 / LED Pin assignment (full pin test)


RS-232 Signal Name	RJ-45	LED
CTS (Clear To Send)	1	CTS
DSR (Data Set Ready)	2	DSR
RD (Receive Data)	3	RXD
SG (Signal Ground)	4	GND
SG (Signal Ground)	5	GND
TD (Transmit Data)	6	TXD
DTR (Data Terminal Ready)	7	DTR
RTS (Request To Send)	8	RTS
FG (Frame Ground)*	9	FG (Frame Ground)*

- Single / TTL out 1 - LED appear Green (V-) / Single / TTL out 0 - LED appear Red (V+)
- Generally, the 4-5-9 LED will not light up - if it does, please check whether there is a problem with the connection part as soon as possible.

### Specification:

1. No power required & test RS-232 interface.
2. Support RS-232 on line Simple test. Support plug& play.
3. Housing : Plastic, Weight : 30g / Dimensions (L\*W\*H) : 47 \* 48 \* 24 ( mm )

### Connection :

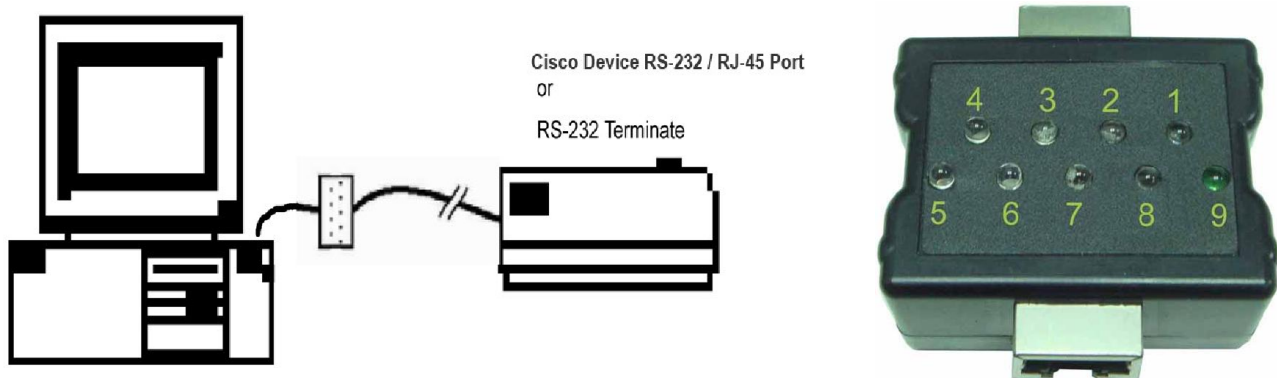

### PC' RJ-45 Cable & Adapter

